

TO POLARIZE GENERATOR

Connect the generator leads and battery cables.

Before starting the engine:

MOMENTARILY connect a short jumper wire between the "ARM" and "BAT" terminals on the voltage regulator (on some aftermarket regulators the "ARM" post is marked "GEN".) The wire may or may not spark.

Generator is now polarized.